

 
 
P/N: 134013170_Ver201709

1 Before Installation

Checking Package Contents


- 1* 16/24 ports Ethernet Switch
- 1* Power Adapter
- 1* Quick Installation Guide

Appearance

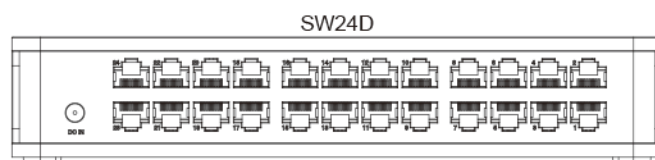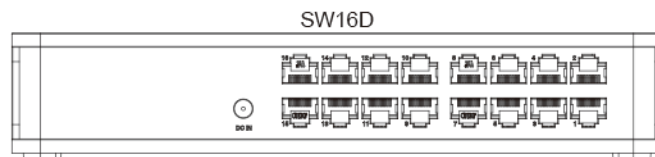

LED Indicators

LED Indicator	Status	Indication
PWR	on	Lights orange when the switch is receiving power
	off	Powered off
1..16 1..24	on	Connected to network lights on, data transmission blinks orange
	off	Not connected


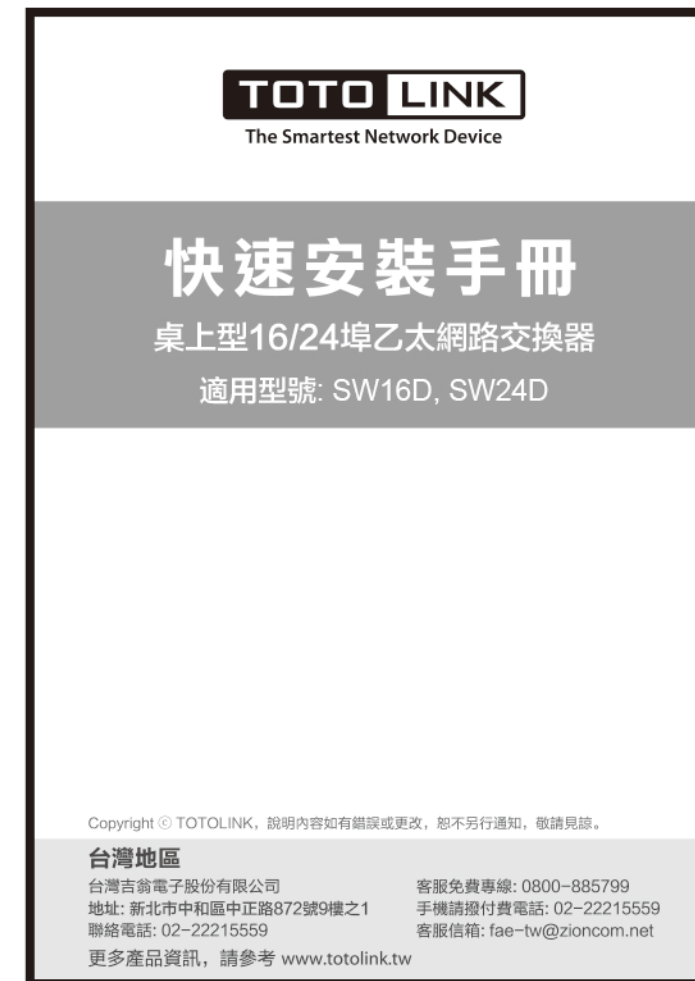 


1 產品介紹

包裝內容

- 1* 桌上型16/24埠乙太網路交換器
- 1* 電源供應器
- 1* 快速安裝手冊

  
產品外觀

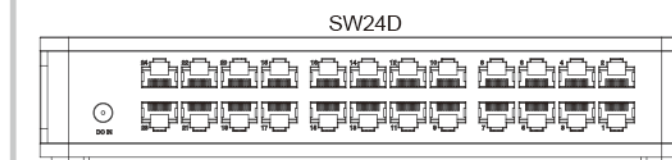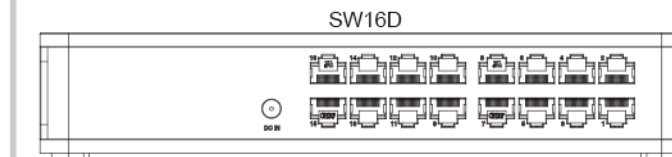

LED燈號說明

LED指示燈	狀態	說明
PWR	燈亮	電源接通燈亮起
	熄滅	未連接電源
1..16 1..24	燈亮	連接網路孔燈亮起, 資料傳輸燈閃爍
	熄滅	網路孔未連接

 2 Hardware Installation Refer to the application scene graph below

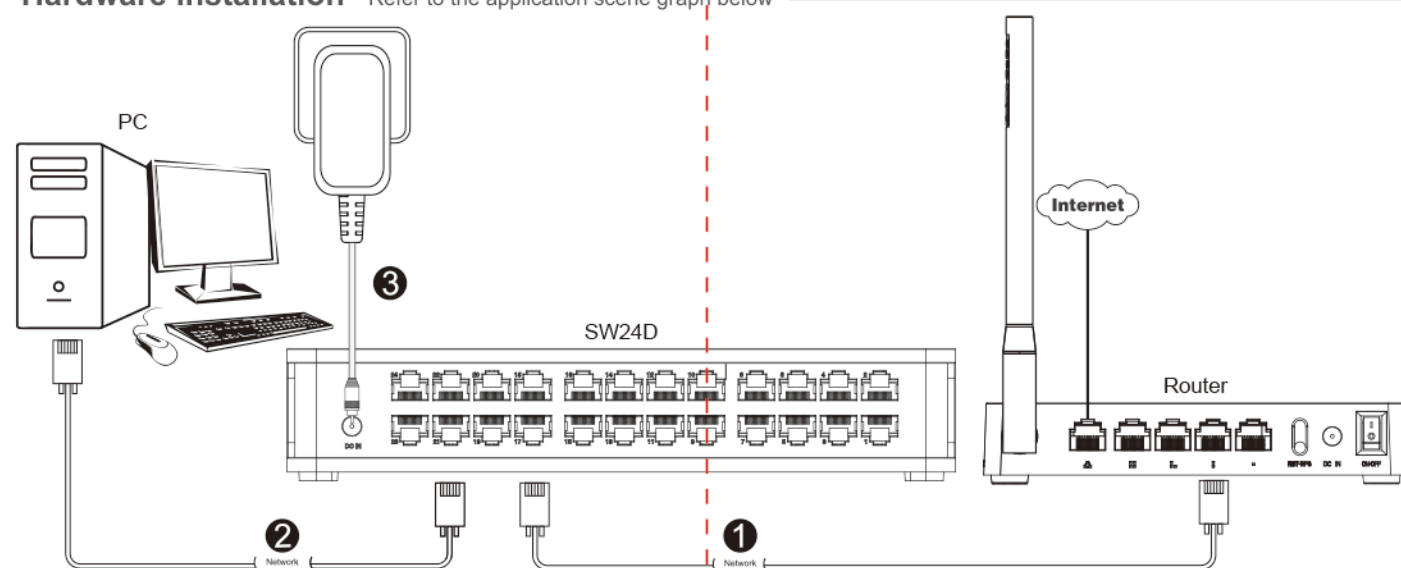


- 1 Connect Switch to Router's LAN port by one Ethernet cable.
- 2 Connect PC's RJ45 port to Switch's LAN port by another Ethernet cable.
- 3 Plug Switch's Power Adapter into outlet.

Note: For simplicity, here we take SW24D for example.

Specifications

Standards	- IEEE 802.3, IEEE 802.3u, IEEE 802.3x
Interface	- 16/24*10/100Mbps RJ45 Ports (Auto Negotiation/Auto MDI/MDIX)
Network Media	- 10BASE-T: UTP Cat 3, 4, 5 cable - 100BASE-TX: UTP Cat 5, 5e or above cable
Power Supply	- DC 9V/0.8A
Switching Capacity	- SW16D: 3.2Gbps; SW24D: 4.8Gbps
MAC Address Table	- SW16D: 4K; SW24D: 8K
Transfer Method	- Store-and-Forward
LED Indicators	- 1*Power, 16/24*LANs
Dimensions (L x W x H)	- 8.9 x 5.0 x 1.8in. (227 x 127 x 45mm)

2 接線方式 請參考下列說明

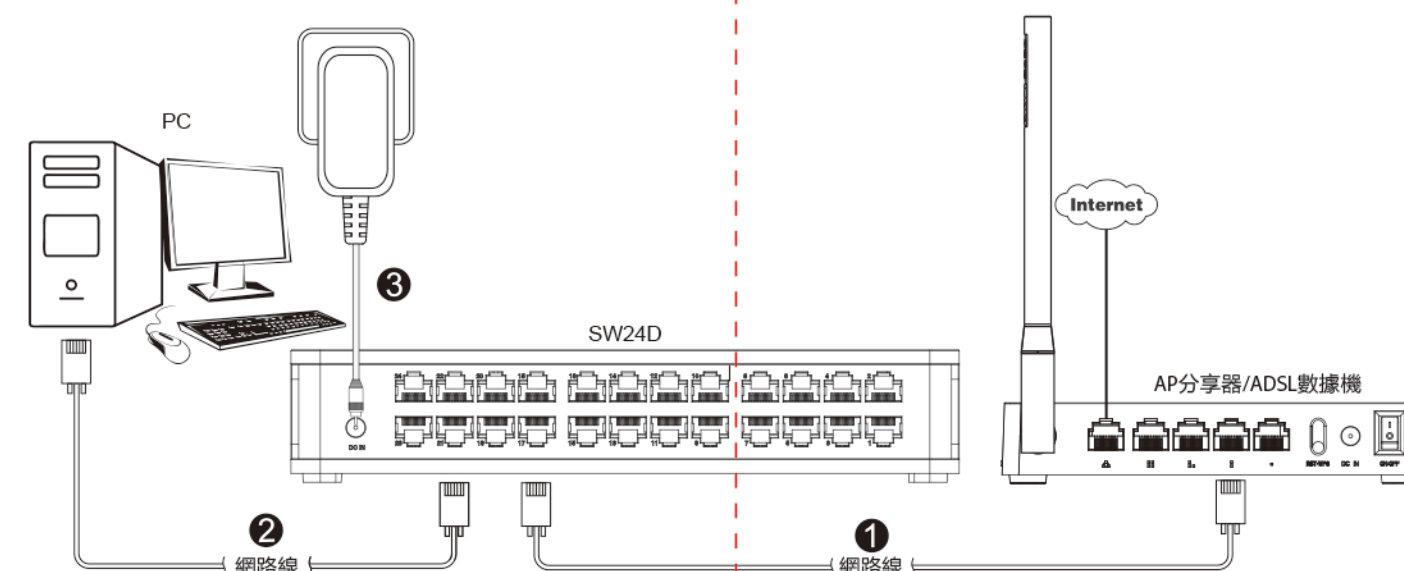

- 1 使用網路線, 連接交換器(任一網路孔)與AP分享器/ADSL數據機的區域網路孔。
- 2 使用第二條網路線, 連接交換器(任一網路孔)與電腦的網路孔。
- 3 使用所附的電源供應器接上電源。

註: 為方便起見, 上圖以SW24D為例說明。

規格表

通訊協定	- IEEE 802.3, IEEE 802.3u, IEEE 802.3x
連接埠	- 16/24埠10/100Mbps自動調整 RJ45標準乙太網路連接埠(Auto MDI/MDIX)
傳輸量	- 10BASE-T: UTP Cat 3, 4, 5 cable - 100BASE-TX: UTP Cat 5, 5e or 或以上
電源規格	- DC 9V/0.8A
背板頻寬	- SW16D: 3.2Gbps; SW24D: 4.8Gbps
MAC 位址表	- SW16D: 4K; SW24D: 8K
傳輸方式	- Store-and-Forward
LED指示燈	- 1個LED電源指示燈, 16/24個LED連接埠指示燈
產品尺寸(長 x 寬 x 高)	- 22.7 x 12.7 x 4.5cm